





仪器型号: TDK-Lambda可编程直流电源1U 750W/1500W

西安安泰测试科技有限公司 仪器维修|租赁|销售|测试

地址:西安市高新区纬二十六路 369 号

网址: www.agitekservice.com

电话: 400-876-5512

座机: 029-88827159

Improved ons

Genesys™

Programmable DC Power Supplies
750W/1500W in 1U
Built in RS-232 & RS-485 Interface
Advanced Parallel Operation
Optional Interface:
LXI Compliant LAN
IEEE488.2 SCPI (GPIB) Multi-drop
Isolated Analog Programming



Genesys™ Family GenH 750W Half Rack Gen1U 750/1500W Full Rack Gen2U 3.3/5kW

TDK-Lambda

TDK·Lambda

The GenesysTM family of programmable power supplies sets a new standard for flexible, reliable, AC/DC power systems in OEM, Industrial and Laboratory applications.

Features include:

- · High Power Density: 1500W in 1U
- Wide Range Input (85 265Vac Continuous, single phase, 47/63Hz)
- Active Power Factor Correction (0.99 typical)
- Output Voltage up to 600V, Current up to 200A
- Built-in RS-232/RS-485 Interface Standard
- Last-Setting Memory
- Global Commands for Serial RS-232/RS-485 Interface
- Front Panel Lock selectable from Front Panel or Software
- High Resolution 16 bit ADCs & DACs
- Reliable Encoders for Voltage and Current Adjustment
- Constant Voltage/Constant Current auto-crossover
- Advanced Parallel reports total current up to four identical units
- Independent Remote ON/OFF and Remote Enable/Disable
- External Analog Programming and Monitoring (user selectable 0-5V & 0-10V)
- Reliable Modular and SMT Design
- 19" Rack Mounted ATE and OEM applications
- Optional Interfaces

Isolated Analog Programming and Monitoring Interface (0-5V/0-10V & 4-20mA) IEEE 488.2 SCPI (GPIB) Multi-Drop

LXI Compliant LAN Interface

- LabView® and LabWindows® drivers
- Five Year Warranty

Worldwide Safety Agency Approvals; CE Mark for LVD and EMC Regulation





Applications

Genesys[™] power supplies have been designed to meet the demands of a wide variety of applications.

Common controls are shared all Genesys™ Series.

Test and Measurement

Last-Setting memory simplifies test design and requires no battery backup.

Built-in RS-232/RS-485 gives maximum system flexibility along with 0-5V and 0-10V, selectable analog programming.

Wide range of available inputs allows testing of many different devices.

Semiconductor Burn-in

Safe-Start may be ENABLED to re-start at Output OFF to protect load.

Wide range input (85-265Vac) with Active Power Factor correction rides through input transients easily.

Component Test

High power density, zero stacking and single wire parallel operation give maximum system flexibility.

Laser Diode

OVP is directly set on Voltage Display, assuring accurate protection settings.

Current Limit Fold Back assures load is protected from current surges.

Heater Supplies

Smooth, reliable encoders enhance front panel control.

Remote analog programming is user selectable 0-5V or 0-10V.

RF Amplifiers and Magnets

Robust design assures stable operation under a wide variety of loads.

High linearity in voltage and current mode.

Front Panel Description



- 1. AC ON/OFF Switch
- 2. Air Intake allows zero stacking for maximum system flexibility and power density.
- 3. Reliable encoder controls Output Voltage and sets Address.
- 4. Volt Display shows Output Voltage and directly displays OVP, UVL and Address settings.
- 5. Reliable encoder controls Output Current, sets baudrate and Advanced Parallel mode.
- 6. Current Display shows Output Current and displays baudrate.
- 7. Function/Status LEDs:
- Alarm
- Foldback Mode
- Fine Control
- Remote Mode
- Preview Settings
- Output On
- 8. Pushbuttons allow flexible user configuration
 - Coarse and Fine adjustment of Output Voltage/Current and Advanced Parallel Master or Slave
 - Preview settings and set Voltage/Current with Output OFF, Front Panel Lockout
 - Set OVP and UVL Limits
 - Set Current Foldback
 - Local/Remote Mode and select Address and Baudrate
 - Output ON/OFF and Auto-Start/Safe-Start Mode

Rear Panel Description



- 1. Remote/Local Output Voltage Sense Connections.
- 2. DIP Switches select 0-5V or 0-10V Programming and other functions.
- 3. DB25 (Female) connector allows (Non-isolated) Analog Program and Monitor and other functions.
- 4. RS-485 OUT to other Genesys™ Power Supplies.
- 5. RS-232/RS-485 IN Remote Serial Programming.
- 6. Output Connections: Rugged busbars for up to 60V Output; wire clamp connector for Outputs >60V.
- 7. Exit air assures reliable operation when zero stacked.
- 8. Wide-Range Input 85-265VAC continuous, 47/63Hz with Active Power Factor Correction (0.99 typical). AC Input Connector: 750W (IEC320), 1500W (screw terminal-shown).
- 9. Optional Interface Position for IEEE 488.2 SCPI (shown) or Isolated Analog Interface or LAN Interface.

TDK-Lambda

Genesys ™ 750W/1500W Specifications

										Specif	cation	in Dlu	o aro in	proved	750W	1500W
1.0 MODEL	GEN	6-200	8-180	12.5-120		30-50	40-38	50-30	60-25					600-2.6	730W	X
1. Rated output voltage (*1)	V	6	8	12.5	20	30	40	50	60	80	100	150	300	600		X
2. Rated Output Current (*2) 3. Rated Output Power	A W	200 1200	180 1440	120 1500	76 1520	50 1500	38 1520	30 1500	25 1500	19 1520	15 1500	10 1500	1500	2.6 1560		X
4. Efficiency at 100/200Vac (*3)	%	77/79	78/81	82/85	83/86	83/86	84/88	84/88		84/88	84/88		84/88			X
1.0 MODEL	GEN	6-100	8-90	12.5-60	20-38	30-25	40-19		60-12.5	80-9.5	100-7.5	150-5	300-2.5	5 600-1.3	Х	
1. Rated output voltage (*1)	V	6	8	12.5	20	30	40		60	80	100	150	300	600	Х	
2. Rated Output Current (*2)	A W	100 600	90 720	750	38 760	25 750	19 760		750	9.5 760	7.5 750	5 750	750	780	X	
3. Rated Output Power 4. Efficiency at 100/200Vac (*3)	- VV - %	76/78	77/80	81/84	82/85		83/87		83/87	83/87	83/87	83/87	83/87		X	
1.1 CONSTANT VOLTAGE MODE	70	170/70	1 7 7 7 0 0	01/01	02/03	1 02/03	1 03/07		1 03/07	1 03/07	03/07	03/07	1 03/0/	1 03/07		
1. Max.line regulation (0.01% of Vo+ 2mV)(*4)	mV	2.6	2.8	3.3	4	5	6	7	8	10	12	17	32	62	Х	X
2. Max load regulation (0.01% of Vo+2mV)(*5)	mV	2.6	2.8	3.3	4	5	6	7	8	10	12	17	32	62	Х	X
3. Ripple and noise p-p 20MHz (*9) 4. Ripple r.m.s 5Hz~1MHz (*9)	mV	60	50	60	60	50	60	40	60	75	75	75	130	300	X	X
5. Remote sense compensation/line	mV V	8	1	7	7.5 1	1.5	2	5	3	7	<u>8</u> 5	5	20 5	5	X	X
6. Temp. coefficient		C 50PPM	/°C of ra	ted outp	ut volta										X	X
7. Temp. stability	%	0.01%	of rated	l lout o	er 8hrs					arm-up.					Х	X
8. Up-prog. response time, 0~Vo Rated 9. Down-prog response time full-load	mS mS	80mS, I	<u>N.L/F.L, r</u>	<u>esistive</u> 50	load			80		150mS,	N.L/F.L,	<u>resistiv</u> 50	e load	250 250	X	X
10. Down-prog response time No-load	mS	500	600	700	800	900	1000	1100	1100	1200	1500	2000	2500	4000	X	 x
11. Transient response time (*8)	mS		an 1mSe										1 2500	1 1000	X	X
12. Temp. drift	%	0.01%	of rated \	out ove/	r 8hrs in	iterval f	ollowing	30 min	utes wa	rm up. Co	onstant	line, loa	d & tem	p.	X	X
1.2 CONSTANT CURRENT MODE											,				·	
1. Max.line regulation (0.01% of lo+ 2mA)(*4)	mA	12	11	8.0	5.8	4.5	3.9		3.25	2.95	2.75	2.5	2.25	2.13	X	
2. Max.load regulation (0.02% of lo+5mA)(*6) 3. Ripple r.m.s 5Hz~1MHz . (*7)	mA mA	25 190	23 160	17 110	12.6 50	10 45	8.8		7.5	6.9	6.5 10	6.0	5.5	5.26 4	X	\vdash
4. Max.line regulation (0.01% of lo+ 2mA)(*4)	mA	22	20	14	9.6	7.0	5.8	5	4.5	3.9	3.5	3.0	2.5	2.26		X
5. Max.load regulation (0.02% of lo+5mA)(*6)	mA	45	41	29	20.2	15	12.6	11	10	8.8	8.0	7.0	6.0	5.52		X
6. Ripple r.m.s 5Hz~1MHz .(*7) 7. Temp. coefficient	mA	350	300	210	120	60	65	60	60	40	20	15	15	7	Y	X
8. Temp. drift	PPIVI/ U	0.01% c	of rated \								nstant	line loa	d & tem	n	X	X
9. Warm up drift	%		an 0.1% r												X	X
1.3 PROTECTIVE FUNCTIONS											_					
1. OCP			6 Consta												Х	X
2. OCP Foldback			shut do												X	X
3. OVP type 4. OVP trip point			r shut-do / 0.5~10V												X	X
5. Over Temp Protection			lectable					J3/ V	J00V	J00V	J110V	J105V	133301	130001	X	X
1.4 ANALOG PROGRAMMING AND MONITORIN	ıG															•
1. Vout Voltage Programming			%, 0~5V ¢												Х	X
2. lout Voltage Programming			%, 0~5V												X	X
3. Vout Resistor Programming 4. lout Resistor Programming		0~1009	<u>%, 0~5/10</u> %, 0~5/10	JKohm t JKohm f	ull scale	user se	lect.,Acc	uracy a	nd linea	<u>rity: +/-1'</u> rity:	% of rate	ed Vout			X	X
5. On/Off control (rear panel)				ltage: 0	~0.6V/2	~15V, or			er select			itcu iou			X	
6 Output Current monitor															X	X
6. Output Current monitor		0~5V o	r 0~10V,	accurac	y: 1%, us	ser selec	table								X	X
7. Output Voltage monitor		0~5V o	r 0~10V, r 0~10V,	accurac	y: 1%, us	ser selec	table	stance							X	X
		0~5V o 0~5V o TTL hig	r 0~10V,	accurac) -OK, 0V	y: 1%, us /-Fail 500	s <u>er selec</u> Oohm se	table eries resi	stance ximum	voltage	30V, ma	ximum	sink cur	rent: 10	mA	X X X	X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable		0~5V o 0~5V o TTL hig Open c Dry cor	r 0~10V, r 0~10V, jh (4~5V) ollector, ntact. Op	accurac) -OK, 0V CC mod en: off,	y: 1%, us /-Fail 500 le: On, C Short: or	ser selec Oohm se V mode n. Max.	table eries resi : Off, Ma voltage a	ximum at Enab	le/Disab	le in: 6V			rent: 10ı	mA	X X X X	X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control		0~5V o 0~5V o TTL hig Open c Dry cor By elec	r 0~10V, r 0~10V, ph (4~5V) collector, ntact. Op trical sig	accurac) -OK, 0V CC mod en: off, ' nal or O	y: 1%, us /-Fail 500 le: On, C Short: or pen/Sho	ser select Dohm se V mode n. Max. v ort: 0~0.	table eries resi : Off, Ma voltage a 6V or sh	ximum at Enab ort: Rer	le/Disab note, 2~	le in: 6V 15V or or	en: Loc	al.		mA	X X X	X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator		0~5V o 0~5V o TTL hig Open c Dry cor By elec	r 0~10V, r 0~10V, jh (4~5V) ollector, ntact. Op	accurac) -OK, 0V CC mod en: off, ' nal or O	y: 1%, us /-Fail 500 le: On, C Short: or pen/Sho	ser select Dohm se V mode n. Max. v ort: 0~0.	table eries resi : Off, Ma voltage a 6V or sh	ximum at Enab ort: Rer	le/Disab note, 2~	le in: 6V 15V or or	en: Loc	al.		mA	X X X X	X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control		0~5V o 0~5V o TTL hig Open c Dry cor By elec	r 0~10V, r 0~10V, jh (4~5V) ollector, ntact. Op trical sig collector,	accurac) -OK, 0V CC mod ben: off, 1 nal or O Local: C	y: 1%, us /-Fail 500 le: On, C Short: or pen/Sho pen, Re	ser selec Dohm se V mode n. Max. v ort: 0~0. mote: 0	table eries resi : Off, Ma voltage a .6V or sh In. Maxir	ximum at Enab ort: Rer num vo	le/Disab note, 2~ Iltage: 30	le in: 6V 15V or op IV, maxir	oen: Loc num sin	al. k currer		mA	X X X X X X	X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL		0~5V o 0~5V o TTL hig Open c Dry cor By elec Open c Vout/lc OVP/UV	r 0~10V, r 0~10V, gh (4~5V) collector, ntact. Op trical sig collector, out manu VL manu	accurac) -OK, 0V CC moden: off, ben: off, b	y: 1%, us /-Fail 500 le: On, C Short: or pen/Sho pen, Re st by sep t by Volt	ser selection services of the	table eries resi : Off, Ma voltage a 6V or sh In. Maxir ncoders encode	ximum at Enabl ort: Rer num vo (coarse	le/Disab note, 2~ ltage: 30 and fine	le in: 6V 15V or op IV, maxir adjustm	oen: Loc num sin ent sele	al. k currer ctable)	nt: 5mA.		X X X X X X X	X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator		0~5V o 0~5V o TTL hig Open c Dry cor By elec Open c Vout/Ic OVP/UV AC on/o	r 0~10V, r 0~10V, yh (4~5V) collector, ntact. Op trical sig collector, out manu VL manu off, Outp	accurac) -OK, 0V CC modulen: off, 1 nal or 0 Local: C ual adjust out on/ot	y: 1%, us /-Fail 500 le: On, C Short: or pen/Sho pen, Re st by sep t by Volt ff, Re-sta	ser selection services of the	etable eries resi : Off, Ma voltage a 6V or sh in. Maxir ncoders encoders es (auto,	eximum at Enablort: Rer num vo (coarse safe), F	le/Disab note, 2~ ltage: 30 and fine	le in: 6V 15V or op IV, maxir adjustm	oen: Loc num sin ent sele	al. k currer ectable)	nt: 5mA.		X X X X X X	X X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL		O~5V o O~5V o TTL hig Open c Dry cor By elec Open c Vout/Ic OVP/UV AC on/o Addres	r 0~10V, r 0~10V, yh (4~5V) collector, ntact. Op trical sig collector, out manu VL manu off, Outp	accurac) -OK, 0V CC mod ben: off, nal or O Local: C ual adjust out on/ot on by Vo	y: 1%, us /-Fail 500 le: On, C Short: or pen/Sho pen, Re st by sep t by Volt ff, Re-sta oltage (o	ser selection services of the	etable eries resi : Off, Ma voltage a .6V or sh in. Maxir encoders encoders es (auto, it) adjust	eximum at Enabl ort: Rer num vo (coarse r safe), F	le/Disab mote, 2~ ltage: 30 and fine oldback er. Numb	le in: 6V 15V or og IV, maxir adjustm control (per of ad	ent sele	al. k currer ectable)	nt: 5mA.		X X X X X X X X	X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL		0~5V o 0~5V o 0~5V o TTL hig Open c Dry cor By elec Open c Vout/lc OVP/U AC on/Addres RS232/Baudra	r 0~10V, r 0~10V, h (4~5V) ollector, ntact. Op trical sig ollector, but manu v/L manu off, Outp s s selecti 485 and te select	accurac) -OK, 0V CC mod ben: off, 1 nal or O Local: C ual adjust al adjust but on/of on by Vo IEEE488 ion: 120	ý: 1%, us /-Fail 500 le: On, C Short: or pen/Sho pen, Re it by sep t by Volt ff, Re-sta oltage (o .2 select 0, 2400,	ser selec Johm se V mode n. Max. v ort: 0~0. mote: O marate er . Adjust art mode r curren cion by I 4800, 9	etable eries resi : Off, Ma voltage a 6V or sh n. Maxir encoders encode es (auto, t) adjust EEE enal 600 and	eximum at Enabl ort: Rer num vo (coarse r safe), F c encod ole swit	le/Disab mote, 2~ ltage: 30 and fine oldback er. Numb	le in: 6V 15V or og IV, maxir adjustm control (per of ad	ent sele	al. k currer ectable)	nt: 5mA.		X X X X X X X X X X X X	X X X X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL		0~5V o 0~5V o 0~5V o TTL hig Open c Dry cor By elec Open c Vout/lc OVP/UV AC on/o Addres RS232// Baudra	r 0~10V, r 0~10V, r 0~10V, lh (4~5V) ollector, ntrical sig ollector, but manu vL manu off, Outp s selecti 485 and te select	accurac acc	y: 1%, us /-Fail 500 le: On, C Short: or pen/Sho pen, Re st by sept t by Volt ff, Re-sta oltage (o. 2 select o, 2400,	ser selection seed of the seed	ctable eries resi : Off, Ma voltage a 6V or sh in. Maxir encoders encoders (auto, t) adjust EEE enal 600 and	eximum at Enabl ort: Rer num vo (coarse r safe), F c encod ole swit	le/Disab mote, 2~ ltage: 30 and fine oldback er. Numb	le in: 6V 15V or og IV, maxir adjustm control (per of ad	ent sele	al. k currer ectable)	nt: 5mA.		X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions		0~5V o 0~5V o 0~5V o 0~5V o TTL hig Open c Dry cor By elec Open c Vout/lc OVP/UV AC on/A Addres RS232/Baudra Voltage Curren	r 0~10V, r 0~10V, lh (4~5V) collector, ntact. Op trical sig collector, but manu vL manu off, Outp s selecti 485 and te select e 4 digits t 4 digits	accurac) -OK, 0V CC mod ben: off, 1 nal or O Local: C ual adjust out on/of oon by Vc IEEE488 ion: 120 , accura	y: 1%, us -Fail 500, C le: On, C Short: on pen/Sho pen, Re it by sep t by Volt ff, Re-sta oltage (o .2 select 0, 2400, cy: 0.05% cy: 0.25% cy: 0.29%	ser selection se	etable eries resi : Off, Ma voltage a voltage a foly or sh n. Maxir ncoders encodes encodes es (auto, t) adjust EEE enal 600 and bunt int	ximum at Enabl ort: Rer mum vo (coarse r safe), F encod ble swit 19,200	le/Disāb note, 2~ ltage: 30 and fine oldback er. Numk ch and D	le in: 6V 15V or op IV, maxir adjustm control (per of ad IIP switcl	ent sele CV to CO dresses:	al. k currer ectable) C), Go to 31	nt: 5mA.		X X X X X X X X X X X X	X X X X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications	/I AN In	0~5V o 0~5V o 0~5V o TTL hig Open c Dry cor By elec Open c Vout/lc OVP/UV AC on/o Addres RS232/ Baudra Voltage Curren Voltage	r 0~10V, r 0~10V, r 0~10V, lh (4~5V) ollector, ntrical sig ollector, but manu vL manu off, Outp s selecti 485 and te select	accurac) -OK, 0V CC mod ben: off, 1 nal or O Local: C ual adjust out on/of oon by Vc IEEE488 ion: 120 , accura	y: 1%, us -Fail 500, C le: On, C Short: on pen/Sho pen, Re it by sep t by Volt ff, Re-sta oltage (o .2 select 0, 2400, cy: 0.05% cy: 0.25% cy: 0.29%	ser selection se	etable eries resi : Off, Ma voltage a voltage a foly or sh n. Maxir ncoders encodes encodes es (auto, t) adjust EEE enal 600 and bunt int	ximum at Enabl ort: Rer mum vo (coarse r safe), F encod ble swit 19,200	le/Disāb note, 2~ ltage: 30 and fine oldback er. Numk ch and D	le in: 6V 15V or op IV, maxir adjustm control (per of ad IIP switcl	ent sele CV to CO dresses:	al. k currer ectable) C), Go to 31	nt: 5mA.		X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X X X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions	/ LAN In	0~5V o 0~5V o 0~5V o TTL hig Open c Dry cor By elec Open c Vout/lc OVP/UV AC on/o Addres RS232/ Baudra Voltage Curren Voltage	r 0~10V, r 0~10V, lh (4~5V) collector, ntact. Op trical sig collector, but manu vL manu off, Outp s selecti 485 and te select e 4 digits t 4 digits	accurac) -OK, 0V CC mod ben: off, 1 nal or O Local: C ual adjust out on/of oon by Vc IEEE488 ion: 120 , accura	y: 1%, us -Fail 500, C le: On, C Short: on pen/Sho pen, Re it by sep t by Volt ff, Re-sta oltage (o .2 select 0, 2400, cy: 0.05% cy: 0.25% cy: 0.29%	ser selection se	etable eries resi : Off, Ma voltage a voltage a foly or sh n. Maxir ncoders encodes encodes es (auto, t) adjust EEE enal 600 and bunt int	ximum at Enabl ort: Rer mum vo (coarse r safe), F encod ble swit 19,200	le/Disāb note, 2~ ltage: 30 and fine oldback er. Numk ch and D	le in: 6V 15V or op IV, maxir adjustm control (per of ad IIP switcl	ent sele CV to CO dresses:	al. k currer ectable) C), Go to 31	nt: 5mA.		X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB		0~5V o 0~5V o 17L hig Open c Dry cor By elec Open c Vout/lc OVP/U/ AC on/ Addres RS232/ Baudra Voltage Curren Voltage terface	r 0~10V, r 0~10V, r 0~10V, yl (4~5V) collector, ntact. Op trical sig collector, but manu vL manu off, Outp s selecti 485 and te select e 4 digits e, Curren	accurac - OK, OV CC mod oen: off, nal or O Local: C ual adjust al adjust out on/of on by Vc IEEE488 ion: 120 accurac t, Alarm	y: 1%, us '-Fail 500 le: On, C Short: on pen/Sho pen	ser selection se	table eries resi : Off, Ma voltage a 6V or sh n. Maxir encoders encode es (auto, t) adjust EEE enal 600 and bunt int Foldback	ximum at Enab ort: Rer num vo (coarse r safe), F c encod ble swit 19,200	le/Disăb note, 2~ Itage: 30 and fine oldback er. Numh ch and D	le in: 6V 15V or op IV, maxir adjustm control (per of ad IIP switcl	ent sele CV to CC dresses:	al. k currer ctable) C), Go to 31	nt: 5mA.	ontrol	X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X X X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 11. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated)	V mV	0~5V o 0~5V o 0~5V o 0~5V o TTL hig Open c Dry cor By elec Open c Open c Vout/Ic OVP/U Addres RS232/ Baudra Voltage Curren Voltage terface 6	r O~10V, r O~10V, ln (4~5V to lector, ntact. Optrical sign of lector, out manufacture, selective selective selective devices and lector of lector	accurac J-OK, OV CC mode all adjust all adjust but on/oi but on/oi but on/oi con by Vo IEEE 488 ion: 120 accura accura t, Alarm 12.5	y: 1%, us '-Fail 500 Je: On, C Short: on pen/Shorts pen/Shorts pen/Shorts pen/Shorts by Volt ff, Re-sta oltage (o. 2 select 0, 2400, cy: 0.05% cy: 0.25% cy: 0.25% cy: 0.25% cy: 0.25% cy: 0.25% cy: 0.25% cy: 0.25% cy: 0.25% cy: 0.25%	ser selection services selection services selection services services selection services selection services ser	table eries resi : Off, Ma voltage a 6V or sh n. Maxir ncoders encodes es (auto, t) adjust EEE enal 600 and bunt int Foldbacl	ximum at Enab ort: Rer num vo (coarse r safe), F encod ble swit 19,200 C, Local,	le/Disăb mote, 2~ litage: 30 and fine oldback er. Numb ch and D Output	le in: 6V 15V or op V, maxir adjustm control (per of ad ell switch On, Fron	ent sele CV to CC dresses: 1 t Panel 100	al. k currer ectable) C), Go to 31 Lock	300 6.0	600 12.0	X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X X X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 11. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11)	V	0~5V o 0~	r O~10V, r O~10V, r O~10V, lollector, ntact. Op trical sig ollector. out manu off, Outp s selecti 485 and te select e 4 digits t, Curren	accurac) - OK, OV CC mode pen: off, in nal or O Local: C ual adjustal uut on/oi on by Vo IEEE4888 ion: 120 ion: 20 ion: 120 ion: 120	y: 1%, us '-Fail 500 le: On, C Short: or pen/Short: or pen/Short: or pen/Short: or pen/Short: or pen/Short: or to by sep to by Volt ff, Re-sta slage (o. 2.2 select 0, 2400, cy: 0.05% cy: 0.2% , Fine, Pi	ser selection services service	table ries res ries ries res r	ximum at Enabl ort: Rer mum vo (coarse r safe), F encod ble swit 19,200	le/Disab note, 2~ oltage: 30 and fine oldback er. Numl ch and D	le in: 6V 15V or op V, maxir adjustm control (per of ad IP switch On, Fron	ent sele CV to CC dresses:	al. k currer ectable) C), Go to 31 Lock	olocal cc	ontrol	X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X X X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit)	MV mV	0~5V o 0~5V o 0~5V o 0~5V o TTL hig Open c Dry cor By elec Open c Vout/lc OVP/UV AC on/v Addres RS232/, Baudra Voltage Curreni Voltage terface 6	r O~10V, r O~10V, h (4~5V ollector, htact. Optical signal signal put manu off, Outp s selecti 44 digits 4 digits e, Curren 8 0.16 4.0	accurac J-OK, OV CC mode CC mode In al adjust In al ad	y: 1%, us '-Fail 50 le: On, C Short: or pen/Sho Open, Re it by sep t by Volt ff, Re-sta oltage (o o. 2 select 0, 2400, cy: 0.05% cy: 0.25% y: 0.29% y: 10.24 10.4	ser selection se	table cries reis coders coders encoders	ximum at Enablo ort: Rer mum vo (coarse safe), F cencod ble switt 19,200 x, Local, 50 1.0 25	le/Disab note, 2~ oltage: 3(and fine oldback er. Numb ch and C	le in: 6V 15V or op V, maxir adjustm control (per of ad IIP switch On, Fron 80 1.6 40	ent sele CV to CO dresses: 1 t Panel 100 2.0 50	al. k currer ectable) C), Go to 31 Lock 150	300 6.0 150	600 12.0 300	X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X X X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated)	mV mV	0~5V o 0~5V o 0~5V o 0~5V o TTL hig Open c Dry cor By elec Open c Vout/Ic OVP/UN AC on/A Addres R\$232/. Baudra Voltage Curren Voltage terface 0.12 3.0	r 0~10V, r 0~10V, h (4~5V ollector, r 0~10V, h (4~5V ollector, r ollector, out manu vL manu off, Outp, s selectic 485 and te select e 4 digits t 4 digits e, Curren 8 0.16 4.0	accurac)-OK, OV CC mode pen: off, : nal or O Local: C ual adjust just on/oi on by Vc IEEE488 ion: 120 12.5 0.25 6.3	y: 1%, us 'Fail 500 le: On, C Short: or pen/Sho pen, Re it by sept by Volt ff, Re-sta oltage (o 2.2 select o), 2400, cy: 0.259 cy: 0.296 y: 1.20	ser selec Oohm se V mode n. Max. v. ort: 0~0. mote: O arate er. Adjust art mod. r currention by I 4800, 90. +/-1 cot. review, I	table eries resi cries resi coff, Ma voltage a 6V or sh nn. Maxir ncoders encode es (auto, t) adjust EEE enal 600 and bunt int coldbacl 40 0.8 20	ximum at Enablo ort: Rer mum vo (coarse safe), F encod ble swit 19,200 c, Local, 50 1.0 25	le/Disăb note, 2~ oltage: 3(and fine oldback er. Numb ch and D Output	le in: 6V 15V or op V, maxir adjustm control (per of ad IIP switch On, Fron 80 1.6 40	ent sele CV to CC dresses: 1 100 2.0 50 0.15	al. k currer ectable) C), Go to 31 Lock 3.0 75	300 6.0 150 0.05	600 12.0 300	X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X X X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 11. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.0% of lo Rated) Accuracy (0.0% of lo Rated)	V mV mV mA mA mA mA mA	0~5V o 0~	r 0~10V, r 0~10V, h (4~5V) ollector, tact. Og trical sig ollector, but manu // L manu off, Outp is selectif 485 and te select 4 digits 4 digits e, Curren	accurac O-OK, OV CC mode on: off, inal or O Local: C ual adjust ut on/oi on by Vo IEEE488 ion: 120 12.5 6.3	y: 1%, us 'Fail 500 le: On, C Short: on pen/Sho pen/Sho pen/Sho pen/Sho pen/Sho by Volt t by Volt ff, Re-sta oltage (o. 2 Select 0, 2400, cy: 0.059 cy: 0.059 cy: 0.29 , Fine, Pr	ser selec Oohm se V mode n. Max. v. ort: 0~0, mote: O earate er. Adjust eart moder r curren ion by I 4800, 9 6+/-1 cov eview, I 30 0.6 15	table ries resi	ximum at Enablo ort: Rer num vo (coarse r safe), F encod ble swit 19,200 50 1.0 25	le/Disab note, 2~ oltage: 30 and fine oldback er. Numb ch and D Output	e in: 6V 15V or op V, maxir adjustm control (ent selective CV to CC dresses: t Panel 100 2.0 50 0.15	al. k currer ctable) C), Go to 31 Lock 150 3.0 75	300 6.0 150 5.0	600 12.0 300 0.03 2.6	X X X X X X X X X X X X X X X X X X X	X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated)	V	0~5V o 0~5V o 0~5V o 0~5V o TTL hig Open c Dry cor By elec Open c Vout/Ic OVP/UN AC on/A Addres R\$232/. Baudra Voltage Curren Voltage terface 0.12 3.0	r 0~10V, r 0~10V, h (4~5V ollector, r 0~10V, h (4~5V ollector, r ollector, out manu vL manu off, Outp, s selectic 485 and te select e 4 digits t 4 digits e, Curren 8 0.16 4.0	accurac)-OK, OV CC mode pen: off, : nal or O Local: C ual adjust just on/oi on by Vc IEEE488 ion: 120 12.5 0.25 6.3	y: 1%, us 'Fail 500 le: On, C Short: or pen/Sho pen, Re it by sept by Volt ff, Re-sta oltage (o 2.2 select o), 2400, cy: 0.259 cy: 0.296 y: 1.20	ser selec Oohm se V mode n. Max. v. ort: 0~0. mote: O arate er. Adjust art mod. r currention by I 4800, 90. +/-1 cot. review, I	table eries resi cries resi coff, Ma voltage a 6V or sh nn. Maxir ncoders encode es (auto, t) adjust EEE enal 600 and bunt int coldbacl 40 0.8 20	ximum at Enablo ort: Rer mum vo (coarse safe), F encod ble swit 19,200 c, Local, 50 1.0 25	le/Disăb note, 2~ oltage: 3(and fine oldback er. Numb ch and D Output	le in: 6V 15V or op V, maxir adjustm control (per of ad IIP switch On, Fron 80 1.6 40	ent sele CV to CC dresses: 1 100 2.0 50 0.15	al. k currer ectable) C), Go to 31 Lock 3.0 75	300 6.0 150 0.05	600 12.0 300	X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X X X X X X X X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 11. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB. Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output) (*10 Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output) (*10 Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output) (*10 Resolution (0.002% of lo Rated)	V	0~5V o 0~	r 0~10V, r 0~10V, h (4~5V) ollector, ntact. Op trical sig ollector, out manu vL manu off, Outps s selecti 485 and te select e 4 digits t 4 digits e, Curren	accurac J-OK, 0V CC mode sen: off, inal or O Local: C lal adjust sult on/ol on by Vo IEEE488 ion: 120 12.5 1.20 1.20 2.40	y: 1%, usy -Fail 500 -Fail 500	er selec Oohm se V mode n. Max. v. ort: 0~0. marate er. Adjust art mod or currencion by I 4800, 9 %+/-1 cot review, I 30 0.6 15	table ries resi Off, Ma voltage a 6V or sh nn. Maxir ncoders encoders encoders s (auto, t) adjust EEE enal 600 and unt oldbacl 40 0.8 20 0.38 3.8 0.76	ximum at Enablo ort: Rer num vo (coarse r safe), F encodo ole swit 19,200 50 1.0 25	le/Disab note, 2~ oltage: 30 and fine oldback er. Numk ch and D 0utput 60 1.2 30	e in: 6V 15V or op V, maxir adjustm adjustm control (per of ad old P switch 80 1.6 40 1.9 1.9 0.38 0.38	ent selection of the control of the	al. k currer ectable) C), Go to 31 Lock 150 3.0 75 0.10 10 0.20	300 6.0 150 0.05 5.0 0.10	600 12.0 300 0.03 2.6 0.05	X X X X X X X X X X X X X X X X X X X	X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.059Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10 Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10 3. Readback Voltage	mV mV mA mA mA	0~5V o 0~	r 0~10V, r 0~10V, h (4~5V) ollector, ntact. Op trical sig ollector, out manu of Noutp s selecti 485 and te select 2 4 digits b, Curren 8 0.16 4.0 1.80 1.80 1.80 1.3.60	accurac John Sharm 12.5 1.20 1.20 1.20 1.20 1.20 1.20 1.20 1.20 1.20 1.20 1.240	y: 1%, us 'Fail 50tle: On, C Short: on pen/Shk typen, Re st by sept t by Volt ff, Re-sta oltage (o 2 select 0, 2400, cy: 0.059 cy: 0.059 cy: 0.2% 10 0.76 152 152	ser selec 200hm se V mode 0.0 hm se V mode 0.0 hm se V mode 0.1 hm se V mode 1.1 hm se V mode 1.2 hm se V mo	table ries resi Off, Ma voltage a 6V or sh n. Maxim ncoders encoders encoders encoders encode s (auto, t) adjust EEE enal 600 and ount int coldback 0.8 20 0.38 3.8 0.76	ximum vat Enabi ort: Rer (coarse from the coarse from the coar	le/Disab mote, 2~ litage: 30 and fine oldback er. Numb ch and D Output 60 1.2 30 0.25 25 0.50	le in: 6V 15V or op W, maxir adjustm control (per of ad IIP switcl On, Fron 80 1.6 40 1.9 1.9 1.9 1.9 1.3 1.8	en: Loc num sin ent sele CV to CC dresses: 1 100 2.0 50 0.15 15 0.30 30	al. k currer ctable) C), Go to 31 Lock 150 0.10 0.20 20	300 300 6.0 150 0.05 5.0 0.10	600 12.0 300 0.03 2.6 0.05 5.2	X	X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 11. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB. Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output) (*10 Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output) (*10 Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output) (*10 Resolution (0.002% of lo Rated)	V	0~5V o 0~	r 0~10V, r 0~10V, h (4~5V) ollector, ntact. Op trical sig ollector, out manu vL manu off, Outps s selecti 485 and te select e 4 digits t 4 digits e, Curren	accurac J-OK, 0V CC mode sen: off, inal or O Local: C lal adjust sult on/ol on by Vo IEEE488 ion: 120 12.5 1.20 1.20 2.40	y: 1%, usy -Fail 500 -Fail 500	er selec Oohm se V mode n. Max. v. ort: 0~0. marate er. Adjust art mod or currencion by I 4800, 9 %+/-1 cot review, I 30 0.6 15	table ries resi Off, Ma voltage a 6V or sh nn. Maxir ncoders encoders encoders s (auto, t) adjust EEE enal 600 and unt oldbacl 40 0.8 20 0.38 3.8 0.76	ximum at Enablo ort: Rer num vo (coarse r safe), F encodo ole swit 19,200 50 1.0 25	le/Disab note, 2~ oltage: 30 and fine oldback er. Numk ch and D 0utput 60 1.2 30	e in: 6V 15V or op V, maxir adjustm adjustm control (per of ad old P switch 80 1.6 40 1.9 1.9 0.38 0.38	ent selection of the control of the	al. k currer ectable) C), Go to 31 Lock 150 3.0 75 0.10 10 0.20	300 6.0 150 0.05 5.0 0.10	600 12.0 300 0.03 2.6 0.05	X X X X X X X X X X X X X X X X X X X	X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*16 Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*16 Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*16 3. Readback Voltage Resolution of Vo Rated Accuracy 0.05% Vo Rated	V	0~5V o 0~	r 0~10V, r 0~10V, h (4~5V ollector, r 0~10V, h (4~5V ollector, r 1 oct of the control of the con	accurac O-OK, OV CC mode oen: off, in nal or O Local: C ual adjust al adjust out on/oi oen: off, in to noi to noi int on/oi oen: 120 int on/oi oen: 120 oen: 1	y: 1%, us y: 1%, us y: 1%, us y: 1%, us y: 18,	ser selec 200hm see V mode 0.0 hm see V mode 0.0 hm see V mode 0.1	table trable tries resi Off, Ma voltage a 6V or sh n. Maxim encoders encodes encodes s (auto, t) adjust EEE enal 600 and bunt int	ximum vat Enabi ort: Ret	le/Disāb mote, 2~ litage: 36 and fine oldback er. Numh ch and D 0utput 1.2 30 0.25 25 0.50 50	e in: 6V 15V or op V, maxir adjustm control (per of ad IP switcl On, Fron 80 1.6 40 1.9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9	ent sele CV to CC dresses: 1 100 100 150 15 0.30 30	al. k currer ctable) Ctable) J. Go to 3.1 150 75 0.10 0.20 20	300 300 6.0 150 0.05 5.0 0.10 10	600 12.0 300 0.03 2.6 0.05 5.2	X X X X X X X X X X X X X X X X X X X	X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 11. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB. Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated) Resolution of Vo Rated Resolution of Vo Rated Accuracy 0.05% Vo Rated Accuracy 0.05% Vo Rated Accuracy 0.05% Vo Rated Accuracy 0.05% Vo Rated	mV mV mV mA mA mA mV mV	0~5V o 0~6V o 0~	r 0~10V, r 0~10V, h (4~5V) ollector, tact. Optical signal of the control of the c	accurac) - OK, OV CC mode nen: off,: nal or O Local: C laal adjust al adjust but on/of on by Vo IEEE4888 ion: 120 , accura: , accura: , accura: 12.5 6.3 1.20 2.40 240	y: 1%, us y: 1%, us y: 1%, us y: 18,	ser selec 200hm see 200hm	table ries resi Off, Ma voltage a 6V or sh n. Maxim encoders encode es (auto, t) adjust EEE enal 600 and bunt int oldback 0.8 20 0.38 38 0.76 76	ximum vat Enabi ort: Ret	le/Disāb mote, 2~ litage: 36 and fine oldback er. Numh ch and D 0utput 1.2 30 0.25 25 0.50 50 1.2 30	e in: 6V 15V or op V, maxir adjustm control (oper of ad IIP switcl On, Fron 80 1.6 40 1.9 1.6 1.6 1.6 40	ent sele CV to CC dresses: 1 100 100 100 110 100 110 100 110 100 110 100 1	al. k currer cctable) C), Go to 31 Lock 150 75 0.10 0.20 20 10.50 75	300 6.0 150 0.010 12 150	600 12.0 300 0.03 2.6 0.05 5.2	X	X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*16 Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*16 Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*16 3. Readback Voltage Resolution of Vo Rated Accuracy 0.05% Vo Rated	V	0~5V o 0~	r 0~10V, r 0~10V, h (4~5V ollector, r 0~10V, h (4~5V ollector, r 1 oct of the control of the con	accurac O-OK, OV CC mode oen: off, in nal or O Local: C ual adjust al adjust out on/oi oen: off, in to noi to noi int on/oi oen: 120 int on/oi oen: 120 oen: 1	y: 1%, us y: 1%, us y: 1%, us y: 1%, us y: 18,	ser selec 200hm see V mode 0.0 hm see V mode 0.0 hm see V mode 0.1	table trable tries resi Off, Ma voltage a 6V or sh n. Maxim encoders encodes encodes s (auto, t) adjust EEE enal 600 and bunt int	ximum ximu	le/Disāb mote, 2~ litage: 36 and fine oldback er. Numh ch and D 0utput 1.2 30 0.25 25 0.50 50	e in: 6V 15V or op V, maxir adjustm control (per of ad IP switcl On, Fron 80 1.6 40 1.9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9	ent sele CV to CC dresses: 1 100 100 150 15 0.30 30	al. k currer ctable) Ctable) J. Go to 3.1 150 75 0.10 0.20 20	300 300 6.0 150 0.05 5.0 0.10 10	600 12.0 300 0.03 2.6 0.05 5.2	X X X X X X X X X X X X X X X X X X X	X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB. Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10 accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10 accuracy (0.1% of lo Rated) Accuracy 0.05%Vo Rated 4. Readback Voltage Resolution of Vo Rated Accuracy 0.05% Vo Rated 4. Readback Current Resolution of Io Rated 4. Readback Current Resolution of Io Rated Accuracy 0.3% of lo Rated output	V	0~5V o 0~6V o 0~	r 0~10V, r 0~10V, h (4~5V) ollector, tact. Optical signal ollector, but manu / L manu off, Outp / S selecti 485 and te selecti 44 digits 4	accuracy of the second of the	y: 1%, us y: 1%, us y: 1%, us y: 1%, us y: 18%, us y: 1	ser selec 200hm see 200hm	table	ximum visimum visimu	e/Disāb mote, 2~ ltage: 36 and fine oldback er. Numh ch and D 0.25 25 0.50 50 1.2 30 1.13 37.50 1.25	e in: 6V 15V or op V, maxir adjustm control (oer of ad IP switcl On, Fron 80 1.6 40 1.9 0.19 19 0.38 38	ent sele CV to CC dresses: 1 100 2.0 50 11.0 50	al. k currer cctable) C). Go tc 31 Lock 150 0.10 10 0.20 20 11.50	300 6.0 150 0.05 5.0 0.10 12 150 0.13	600 12.0 300 0.03 2.6 0.05 5.2 12 300 0.12 3.90 0.10	X	X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB. Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated) Accuracy 0.05%Vo Rated Accuracy 0.05% Vo Rated Accuracy 0.3% of lo Rated (*10) Resolution of lo Rated Accuracy 0.3% of lo Rated (*10) Resolution of lo Rated output Accuracy 0.3% of lo Rated (*10)	V	0~5V o 0~	r O~10V, r O~10V, h (4~5V ollector, r O~10V, h (4~5V ollector, r ollector, o	accurac O.25	y: 1%, us y: 1%, us y: 1%, us y: 1%, us y: 18,	ser selec 200hm see V mode 200hm see V m	table	ximum vait Enabi ort: Rer mum vo (coarse safe), F F (safe), F (saf	e/Disāb mote, 2~ ltage: 30 and fine oldback er. Numb ch and D 0.25 25 0.50 50 1.2 30 1.13 37.50	e in: 6V 15V or op V, maxir adjustm control (per of ad IP switcl On, Fron 80 1.6 40 1.6 40 1.6 40	Den: Loc num sin ent sele CV to CC dresses: 1 100 2.0 50 11.0 50 11.0 50	al. k currer ctable) Lock 150 3.0 75 0.10 0.20 20 10.50 75 15	300 local cc 300 6.0 150 10 10 10 12 150 10 13 7.50	0.03 2.6 0.05 5.2 12 300	X	X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated) Resolution of Vo Rated 4. Readback Current Resolution of Io Rated Accuracy 0.3% of lo Rated (*10) Resolution of lo Rated Accuracy 0.3% of lo Rated (*10) Resolution of Rated (*10) Resolution of Rated (*10) Resolution of Rated (*10) S. OVP/UVL Programming	mV mV mA mA mA mA mA	0~5V o 0~	r 0~10V, r 0~10V, h (4~5V) ollector, ntact. Optical sign of solutions	accuracy	y: 1%, us y: 1%, us y: 1%, us y: 1%, us y: 18%, us le: On, C Short: ol pen/Sho pen/Sho pen, Re ti by sep ti by Volt ff, Re-sta pltage (o) 2 select 0, 2400, 0; 0.059 cy: 0.059 cy: 0.29 10 0.4 10 0.76 7.52 152 1.20 10 1.14 1.14 1.52 2.28	ser selec 200 ms ser ser ser ser ser ser ser ser ser se	table	ximum variate from the control of th	e/Disāb mote, 2~ ltage: 3(and fine oldback er. Numh ch and D 0.25 25 0.50 0.50 50 1.2 30 1.13 37.50 1.25 75	e in: 6V 15V or op V, maxir adjustm control (ber of ad IP switc) On, Fron 80 1.6 40 0.19 19 19 19 19 19 19 19 19 19	Den: Loc num sin ent sele CV to CC dresses: 10 100 100 50 11,0 50 11,0 50 11,0 50	al. al. k currer ctable) Cock 150 3.0 75 0.10 10.50 20 10.50 0.15 11.10 3.0	300 6.0 150 0.05 5.0 0.13 7.50 0.15 15	0.03 2.6 0.05 5.2 12 300 0.12 3.90 0.10 7.8	X	X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB. Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy (0.5% OR Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10; Resolution (0.002% of lo Rated) Accuracy (0.0% of lo Rated+0.1% of lo Actual Output)(*10; Resolution of lo Rated) Accuracy (0.3% of lo Rated+0.1% of lo Actual Output)(*10; Resolution of lo Rated) Accuracy (0.1% of lo Rated) Accuracy (0.3% of lo Rated (*10) Resolution of lo Rated (*10) Resolution (0.1% of Vo Rated)	MV MV MV MV MV MV MV MA MA	0~5V o 0~	r O~10V, r O~10V, h (4~5V ollector, r O~10V, h (4~5V ollector, r ollector, o	accurac	y: 1%, us y: 1%, us y: 1%, us y: 1%, us y: 18,	ser selec 200hm see 200hm	table	ximum va t Enabi ort: Rer mum vo coarse r safe), F F safe), F S S S S S S S S S S S S S S S S S S	e/Disābmote, 2~ mote, 2~ ltage: 36 and fine oldbacker. Numbch and Discounties 0.0tput 1.2 30 1.2 30 1.2 30 1.2 30 1.2 30 1.2 30 1.2 30 1.2 30 1.2 30 1.2 30 1.2 30 1.2 30 1.3 37.50 1.25 75 60	e in: 6V 15V or op V, maxir adjustm control (per of add) 1P switch 0n, Fron 80 1.6 40 1.9 1.9 0.19 1.6 40 1.6 40 1.6 40 1.6 40 1.6 40 1.6 40 1.6 40 1.6 40 1.6 40 1.7 1.8 1.8 1.8 1.8 1.8 1.8 1.8 1.8	ent selective for the selectiv	al. k currer cctable) 150 150 10.50 75 10.50 10.31 10.50 75 11.10 30 150 150	300 6.0 150 0.05 5.0 0.10 12 150 0.13 7.50 0.15 15	0.03 0.03 2.6 0.05 5.2 12 300 0.12 3.90 0.10 7.8	X	X
7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated) Resolution of Vo Rated 4. Readback Current Resolution of Io Rated Accuracy 0.3% of lo Rated (*10) Resolution of lo Rated Accuracy 0.3% of lo Rated (*10) Resolution of Rated (*10) Resolution of Rated (*10) Resolution of Rated (*10) S. OVP/UVL Programming	mV m	0~5V o 0~5V o 0~5V o 0~5V o 0~5V o 0~5V o 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	r 0~10V, r 0~10V, h (4~5V) ollector, ntact. Optical sign of solutions	accuracy	y: 1%, us y: 1%, us y: 1%, us y: 1%, us y: 18,	ser selec 200hm see V mode 0.00hm see V mode 0.0	table	ximum variable ximu	e/Disāb mote, 2~ oltage: 30 and fine oldback er. Numb ch and D 0.25 25 0.50 50 1.2 30 1.13 37.50 1.25 75 60 600	e in: 6V 15V or op V, maxir adjustm control (per of add) 1P switch On, Fron 80 1.6 40 1.6 40 1.6 40 1.6 40 1.6 40 1.6 40 1.6 40 1.6 40 1.6 40 1.6 40 1.6 40 1.7 1.8 1.8 1.8 1.8 1.8 1.8 1.8 1.8	ent sele CV to CC dresses: 1 100 1100 111.0 50 11.0 10.15 122.50 1.05 1.05 1.05 1.05 1.00 1.00 1.00 1	al. k currer cctable) Cock 150 150 150	300 6.0 150 0.05 5.0 0.10 10 12 150 0.13 7.50 0.15 15 0.13 0.13	0.03 2.6 0.05 5.2 12 300 0.12 3.90 0.10 7.8	X	X

^{*1:} Minimum voltage is guaranteed to maximum 0.2% of Vo Rated.
*2: Minimum current is guaranteed to maximum 0.4% of Io Rated.
*3: At maximum output power.
*4: 85~132Vac or 170~265Vac, constant load.

 ^{*4:88~132}VaC or 170~265VaC, constant load.
 *5: From No-load to Full-load, constant input voltage.
 *6: For load voltage change, equal to the unit voltage rating, constant input voltage.
 *7: For 6V models the ripple is measured at 2~6V output voltage and full output current. For other models, the ripple is measured at 10~100% output voltage and full output current.

^{*8:} Time for the output voltage to recover within 0.5% of its rated for a load change 10~90% of rated output, Output set-point:10~100%.
*9: For 6V~300V models: measured with JEITA RC-9131A 1:1 probe. For 600V model: measured with 10:1 probe Accuracy -Values have been calculated at Vo Rated & Io Rated.
*10: The Constant Current programming readback and monitoring accuracy does not include the

warm-up and Load regulation thermal drift. *11: Measured at the sense point.

General Specifications Genesys™ 750W/1500W

1. Input voltage/freg. (*1)	85~265Vac continuous, 47~63Hz, single phase
2. Power Factor	0.99 @100/200Vac, rated output power.
	(3.59 to 0.2004a, rated output power. Compiles with EN61000-3-2 class A and EN61000-3-3 at 20~100% output power.
3. EN61000-3-2,3 compliance	
4. Input current 100/200Vac	750W:10.5A / 5A, 1500W:21A / 11A
5. Inrush current 100/200Vac	750W :Less than 25A, 1500W :Less than 50A
5. Hold-up time	More than 20mS, 100Vac, at 100% load.
2.2 POWER SUPPLY CONFIGURATION	
1. Parallel Operation	Up to 4 units in master/slave mode with single wire current balance connection
2. Series Operation	Up to 2 units. with external diodes. 600V Max to Chassis ground
2.3 ENVIRONMENTAL CONDITIONS	0.505.100/.la-d
1. Operating temp	0~50°C, 100% load.
2. Storage temp	-20~70°C
3. Operating humidity	30~90% RH (non-condensing).
4. Storage humidity	10~95% RH (non-condensing).
5. Vibration	MIL-810E, method 514.4, test cond. I-3.3.1. The EUT is fixed to the vibrating surface.
5. Shock	Less than 20G, half sine, 11mSec. Unit is unpacked.
7. Altitude	Operating: 10000ft (3000m), Derat output current by 2%/100m above 2000m, Non operating: 40000ft (12000m).
	perating. 1000011 (200011), Detat output current by 2.70/100111 above 2000111, Notit operating. 4000011 (12000111).
2.4 EMC	
1. Applicable Standards:	
2. ESD	IEC1000-4-2. Air-disch8KV, contact disch4KV
3. Fast transients	IEC1000-4-4. 2KV
4. Surge immunity	IEC1000-4-5. IKV line to line. 2KV line to ground
5. Conducted immunity	
	IEC1000-4-6, 3V
S. Radiated immunity	IEC1000-4-3, 3V/m
7. Conducted emission	EN55022B, FCC part 15J-B, VCCI-B.
3. Radiated emission	EN55022A, FCC part 15-A, VCCI-A.
9. Voltage dips	EN61000-4-11
10. Conducted emission	EN55022B, FCC part 15-B, VCCI-B.
11. Radiated emission	EN55022A, FCC part 15-A, VCCI-A.
2.5 SAFETY	ENSOZZA, TEC PARTIS AL TECHNIC
	TH COOP 1 CCA22 2 No. COOP 1 FC COOP 1 FN COOP 1
1. Applicable standards:	UL 60950-1, CSA22.2 No.60950-1, IEC 60950-1, EN 60950-1
	Models with Vout 50V: Output is SELV, all communication/control interfaces (RS232/485, IEEE, Isolated Analog,
	LAN, Sense, Remote Programming and Monitoring) are SELV. Models with 60V Vout 400V: Output is Hazardous, communication/control interfaces: RS232/485, IEEE,
21 . 6 . 1 . 16	Models with 60V Yout 400V: Output is Hazardous, communication/control interfaces: RS232/485, IEEE,
2.Interface classification	Isolated Analog, LAN, Remote Programing and Monitoring (pins 1-3, pins14-16) are SELV, Sense, Remote
	Programming and Monitoring (pins 8-13, pins 21-25) are Hazardous. Models with 400V Vout 600V: Output is Hazardous, all communication/control interfaces (RS232/485, IEEE,
	Models with 400V Vout 600V: Output is Hazardous, all communication/control interfaces (RS232/485, IEEE,
	Isolated Analog, LAN, Sense, Remote Programming and Monitoring) are Hazardous. Vout 50V models: Input-Output (SELV): 4242VDC 1min, Input-communication/control (SELV): 4242VDC 1min,
	Vout 50V models : Input-Output (SELV): 4242VDC 1min, Input-communication/control (SELV): 4242VDC 1min,
	Input-Ground: 2828VDC 1min,
	60V Vout 150V models: Input-Output (Hazardous): 3425VDC 1min, Input-communication/control (SELV):
2 With the desired	4242VDC 1min, Output(Hazardous)-SELV: 2307VDC 1min, Output(Hazardous)-Ground: 1414VDC 1min,
3.Withstand voltage	Input-Ground: 2828VDC Tmin.
	300V Yout 600V models: Input-Output(Hazardous): 3490VDC 1min, Input-communication/control (SELV):
	4242VDC 1min, Hazardous, Output-communication/control(SELV): 4242VDC 1min,
	Output(Hazardous)-Ground: 2738VDC 1min, Input-Ground: 2828VDC 1min,
1.Insulation resistance	More than 100Mohm at 25°C, 70% RH.
Anistiation resistance	Infore than reconstruint at 23 C, 70% off.
2.6 MECHANICAL CONSTRUCTION	
. Cooling	Forced air flow: from front to rear. No ventilation holes at the top or bottom of the chassis; Variable fan speed.
2. Dimensions (WxHxD)	W: 422.8mm, H: 43.6mm, D: 432.8mm (excluding connectors, encoders, handles, etc.)
B. Weight	750W: 7Kg (15 Lbs) 1500W: 8.5Kg (18 Lbs)
o. weight	750W: 175 LDS) 1500W: 8.5kg (18 LDS) 1750W: IEC320 AC Inlet.
	1500W: Screw terminal block. Phoenix P/N: FRONT-4-H-7.62. with strain relief
4. AC Input connector	
4. AC Input connector	
<u>'</u>	6V to 60V models: Bus-bars (hole Ø 8.5mm). 80V to 600V models: wire clamp connector, Phoenix P/N: FRONT-4-H-7.62
4. AC Input connector 5. Output connectors 2.7 RELIABILITY SPECS	

^{*1:} For cases where conformance to various safety standards (UL, IEC etc.) is required, to be described as 100-240Vac (50/60Hz). All specifications subject to change without notice.

TDK·Lambda

Genesys[™] Power Parallel and Series Configurations

Parallel operation - Master/Slave:

Active current sharing allows up to four identical units to be connected in an auto-parallel configuration for four times the output power. In Advanced Parallel Master/Slave Mode, total current is programmed and reported by the Master, Up to four supplies act as one.




Series operation

Up to two units may be connected in series to increase the output voltage or to provide bipolar output. (Max 600V to Chassis Ground).

Remote Programming via RS-232 & RS-485 Interface

Standard Serial Interface allows chain control of up to 31 power supplies on the same bus with built-in RS-232 & RS-485 Interface.



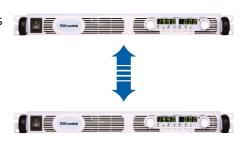

P/N: IEEE

Programming Options (Factory installed)

Digital Programming via IEEE Multi-Drop Interface

- Allows IEEE Master to control up to 30 slaves over RS-485 daisy-chain
- Only the Master needs be equipped with IEEE Interface
- IEEE 488.2 SCPI Compliant
- Program Voltage
- Measure Voltage
- Over Voltage setting and shutdown
- Error and Status Messages

- Program Current
- Measure Current
- Current Foldback shutdown

Isolated Analog Programming

Four Channels to Program and Monitor Voltage and Current. Isolation allows operation with floating references in harsh electrical environments. Choose between programming with Voltage or Current. Connection via removable terminal block: Phoenix MC1,5/8-ST-3.81.

- Voltage Programming, user-selectable 0-5V or 0-10V signal.
 Power supply Voltage and Current Programming Accuracy ±1%
 Power supply Voltage and Current Monitoring Accuracy ±1.5%
- Current Programming with 4-20mA signal.
 Power supply Voltage and Current Programming Accuracy ±1%
 Power supply Voltage and Current Monitoring Accuracy ±1.5%

P/N: IS510

P/N: IS420

LAN Interface L' Compliant to Class C P/N: LAN

- Meets all LXI-C Requirements
- Address Viewable on Front Panel
- Fixed and Dynamic Addressing
- Compatible with most standard Networks
- VISA & SCPI Compatible
- LAN Fault Indicators
- Auto-detects LAN Cross-over Cable
- Fast Startup

Power Supply Identification / Accessories How to order

GEN	600	- 2.6	-	-
			Factory Options	AC Cable option is 750W only
Series	Output	Output	Option: IEEE	Region: E - Europe
Name	Voltage	Current	IS510	GB - United Kingdom
	(0~600V)	(0~2.6A)	IS420	J - Japan
			LAN	I - Middle East
				U- North America

Models 750/1500W

Model	Output Voltage VDC	Output Current (A)	Output Power (W)
GEN6-100	0.61/	0~100	600
GEN6-200	0~6V	0~200	1200
GEN8-90	0~8V	0~90	720
GEN8-180		0~180	1440
GEN12.5-60	0~12.5V	0~60	750
GEN12.5-120		0~120	1500
GEN20-38	0~20V	0~38	760
GEN20-76	U~20V	0~76	1520
GEN30-25	0. 201/	0~25	750
GEN30-50	0~30V	0~50	1500
GEN40-19	0~40V	0~19	760
GEN40-38	U~4UV	0~38	1520

Model	Output Voltage VDC	Output Current (A)	Output Power (W)
GEN50-30	0~50V	0~30	1500
GEN60-12.5	0~60V	0~12.5	750
GEN60-25	U~60V	0~25	1500
GEN80-9.5	0~80V	0~9.5	760
GEN80-19		0~19	1520
GEN100-7.5	0~100V	0~7.5	750
GEN100-15	U~100V	0~15	1500
GEN150-5	0~150V	0~5	750
GEN150-10	0~1500	0~10	1500
GEN300-2.5	0.2001/	0~2.5	750
GEN300-5	0~300V	0~5	1500
GEN600-1.3	0 6001	0~1.3	780
GEN600-2.6	0~600V	0~2.6	1560

Factory option

RS-232/RS-485 Interface built-in Standard GPIB Interface IEEE
Voltage Programming Isolated Analog Interface IS510
Current Programming Isolated Analog Interface IS420
LAN Interface (Complies with Class C) LAN

AC Cords sets (750W only)

Region	Europe	United Kingdom	Japan	Middle East	North America
Output Power	750W	750W	750W	750W	750W
AC Cords	10A/250Vac L=2m	10A/250Vac L=2m	13A/125Vac L=2m	10A/250Vac L=2m	13A/125Vac L=2m
Wall Plug	INT'L 7/VII	BS1363		SI-32	NEMA 5-15P
Power Supply	IEC320-C13	IEC320-C13	IEC320-C13	IEC320-C13	IEC320-C13
Connector					
Part Number	P/N: GEN/E	P/N: GEN/GB	P/N: GEN/J	P/N: GEN/I	P/N:GEN/U

P/N

Accessories

1. Communication cable

RS-232/RS-485 Cable is used to connect the power supply to the PC Controller.

Mode	RS-485	RS-232	RS-232
PC Connector	DB-9F	DB-9F	DB-25F
Communication Cable	Shield Ground L=2m	Shield Ground L=2m	Shield Ground L=2m
Power Supply Connector	EIA/TIA-568A (RJ-45)	EIA/TIA-568A (RJ-45)	EIA/TIA-568A (RJ-45)
P/N	GEN/485-9	GEN/232-9	GEN/232-25


2. Serial link cable*


Daisy-chain up to 31 Genesys[™] power supplies.

Mode	Power Supply Connector	Communication Cable	P/N
RS-485	EIA/TIA-568A (RJ-45)	Shield Ground L=50cm	GEN/RJ45


^{*} Included with power supply

Outline Drawing Genesys™ 750W/1500W Units

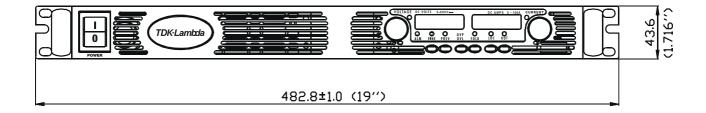

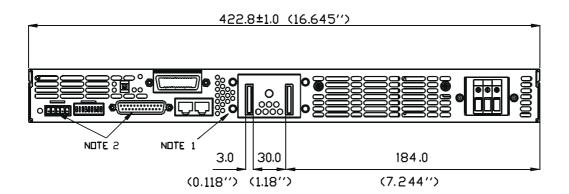



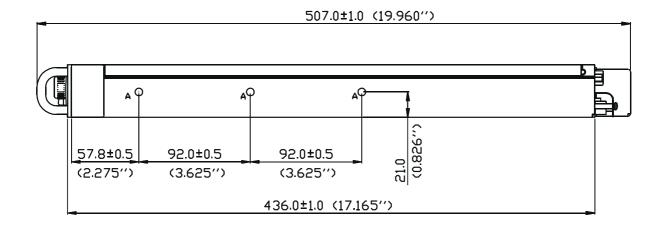

NOTE

- 1. Bus bars for 6v to 60v models (shown) Wire clamp connector for 80V to 600V models
- 2. Plug connectors included with the power supply
- 3. Chassis slides mounting holes #10-32 marked "A" GENERAL DEVICES P/N: C-300-S-116 or equivalent

TDK·Lambda



TDK-Lambda France SAS

Tel: +33 1 60 12 71 65 tlf.fr.powersolutions@tdk.com www.emea.lambda.tdk.com/fr



Italy Sales Office

Tel: +39 02 61 29 38 63 tlf.it.powersolutions@tdk.com www.emea.lambda.tdk.com/it



Netherlands

tlf.nl.powersolutions@tdk.com www.emea.lambda.tdk.com/nl



TDK-Lambda Germany GmbH

Tel: +49 7841 666 0 tlg.powersolutions@tdk.com www.emea.lambda.tdk.com/de



Austria Sales Office

Tel: +43 2256 655 84 tlg.at.powersolutions@tdk.com www.emea.lambda.tdk.com/at



Switzerland Sales Office

Tel: +41 44 850 53 53 tlg.ch.powersolutions@tdk.com www.emea.lambda.tdk.com/ch



Nordic Sales Office

Tel: +45 8853 8086 tlg.dk.powersolutions@tdk.com www.emea.lambda.tdk.com/dk



TDK-Lambda UK Ltd.

Tel: +44 (0) 12 71 85 66 66 tlu.powersolutions@tdk.com www.emea.lambda.tdk.com/uk



TDK-Lambda Ltd.

Tel: +9 723 902 4333 tli.powersolutions@tdk.com www.emea.lambda.tdk.com/il-en



TDK-Lambda Americas

Tel: +1 800-LAMBDA-4 or 1-800-526-2324 tla.powersolutions@tdk.com www.us.lambda.tdk.com



TDK Electronics do Brasil Ltda

Tel: +55 11 3289-9599 sales.br@tdk-electronics.tdk.com www.tdk-electronics.tdk.com/en



TDK-Lambda Corporation

Tel: +81-3-6778-1113 www.jp.lambda.tdk.com



TDK-Lambda (China) Electronics Co. Ltd.

Tel: +86 21 6485-0777 tlc.powersolutions@tdk.com www.lambda.tdk.com.cn



TDK-Lambda Singapore Pte Ltd.

Tel: +65 6251 7211 tls.marketing@tdk.com www.sg.lambda.tdk.com



TDK India Private Limited, Power Supply Division

Tel: +91 80 4039-0660 mathew.philip@tdk.com www.sg.lambda.tdk.com

