
PXI-2598

Features

2025-03-20



Contents

PXI-2598 Overview 3

PXI-2598 Overview

PXI-2598 Pinout

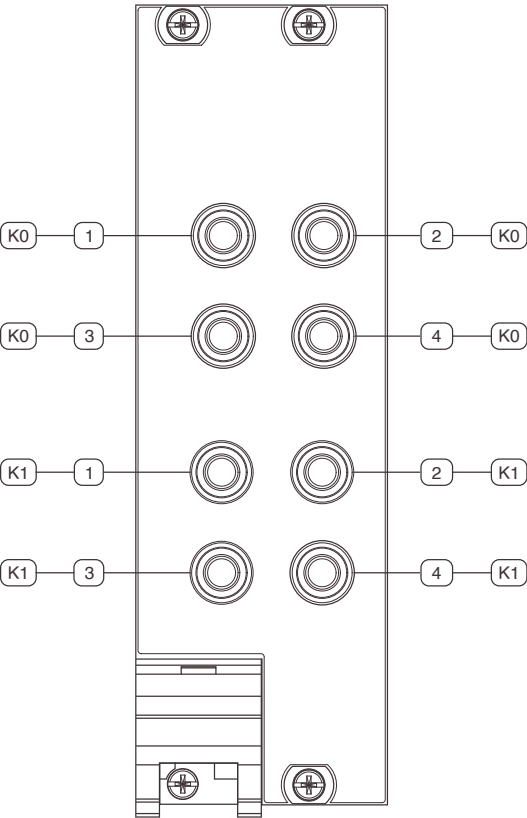


Table 1. Signal Descriptions

Signal	Description
<1..4>	Signal connection
Kx	Relay


PXI-2598 Topology

This figure describes the topology of the module.


Module software name: 2598/Dual Transfer
(NISWITCH_TOPOLOGY_2598_DUAL_TRANSFER)

The dual transfer switch topology of the module enables customers to insert and remove components in a high-frequency signal path. To insert the DUT, configure the transfer switch in its reset state. To remove the DUT, configure the transfer switch in its set state.

Dual Transfer Switch Topology

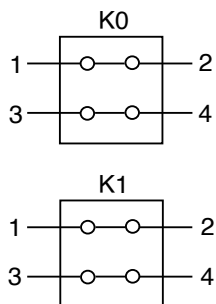

Topology SET and RESET States

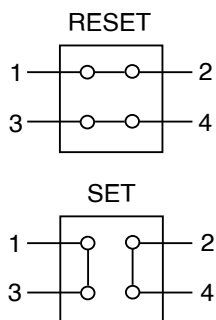

Making a Connection

You can control the channels using the niSwitch Connect Channels VI or the `niSwitch_Connect` function.

To set the transfer switch, disconnect the nc terminal from com, and connect no to com. For example, to set the transfer switch K0, use the following code:

```
niSwitch_Disconnect(vi, "nc0", "com0")
```

```
niSwitch_Connect(vi, "no0", "com0")
```



Note To connect no to com you do not need to disconnect nc from com after the module has been reset or a call to the niSwitch Disconnect All Channels VI or the niSwitch_DisconnectAll function has been made.



Note niSwitch_Disconnect(vi, "nc0", "com0") does not operate the relay until niSwitch_Connect(vi, "no0", "com0") is executed. Similarly, niSwitch_Disconnect(vi, "no0", "com0") does not operate the relay until niSwitch_Connect(vi, "nc0", "com0") is executed.

To reset the transfer switch, disconnect the no terminal from com, and connect nc to com. For example, to reset the transfer switch K0, use the following code:

```
niSwitch_Disconnect(vi, "no0", "com0")
```

```
niSwitch_Connect(vi, "nc0", "com0")
```

When scanning the module, a typical scan list entry could be `nc0->com0`; . This entry resets transfer switch K0.